


7 AH Configuration tool

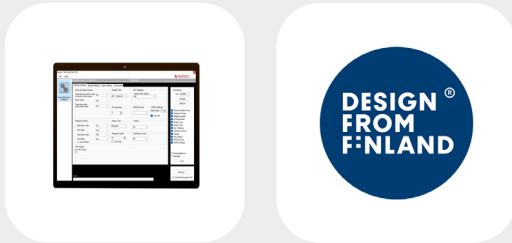

Fast, convenient, reader programming of 7 AH readers before installing. Create your own custom reader configurations e.g. for Parity, data length, Clock & Data, LED colour, buzzer mode, optical tamper etc.

Minimum system requirements

Operating system	Microsoft Windows XP (Service Pack 3) / Windows 7 .Net Framework 3.5 or newer
Processor	1GHz Pentium processor or equivalent (Minimum)
RAM	1 Gt (Minimum); 2Gt (Recommended)
Display	1024 x 768 high color, 32-bit (Minimum)
	USB drive
Configuration tool to PC interface	USB
Configuration tool to reader interface	RS-232

Package contains

7 AH Configuration Tool
7AH Configuration Tool User manual
USB Stick including the following:
1. 7AH Conf SW
2. 7AH Conf SW User Manual
7AH Connection board

Idesco Oy reserves the right to revise this publication and to make changes to its content as well as the right to change or discontinue these products, at any time, without obligation to notify any person or entity of such revisions or changes. All trademarks and registered trademarks are property of their respective owners.
14.6.2024. C00638E v1.03.

Idesco Oy

Elektroniikkatie 4
90590 Oulu
Finland

Tel. +358 (0)20 743 4175
Email info@idesco.fi
idesco.fi

